


## NetComm NB6 / NB6W / NB6Plus4W Firmware Upgrade Instructions

1. Using your web browser (Internet Explorer, Mozilla Firefox, etc.), enter the IP address of your NetComm router into the Address Bar. The default address is <http://192.168.1.1>.
2. Log on using your administrative user name and password. The default is **admin** and **admin**.
3. Click on **Management** at the top, and then **Update Firmware** on the left.

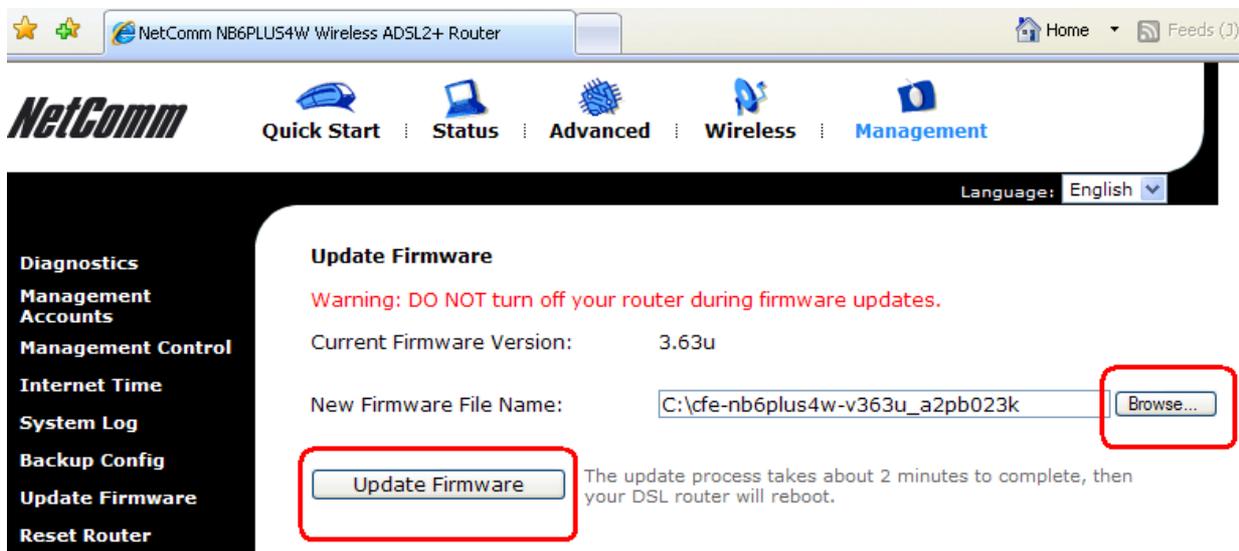

NetComm NB6PLUS4W Wireless ADSL2+ Router

NetComm

Quick Start | Status | Advanced | Wireless | Management

Language: English

**Update Firmware**

Warning: DO NOT turn off your router during firmware updates.

Current Firmware Version: 3.63u

New Firmware File Name: C:\cfe-nb6plus4w-v363u\_a2pb023k

The update process takes about 2 minutes to complete, then your DSL router will reboot.

4. Use the **Browse** button to locate the firmware image file.
5. After selecting the firmware image file, click **Update Firmware**, and wait for the process to complete. The process may take approximately 1-2 minutes, after which, the modem will reboot.